




- 1** Place TI-Proboard directly on joists.

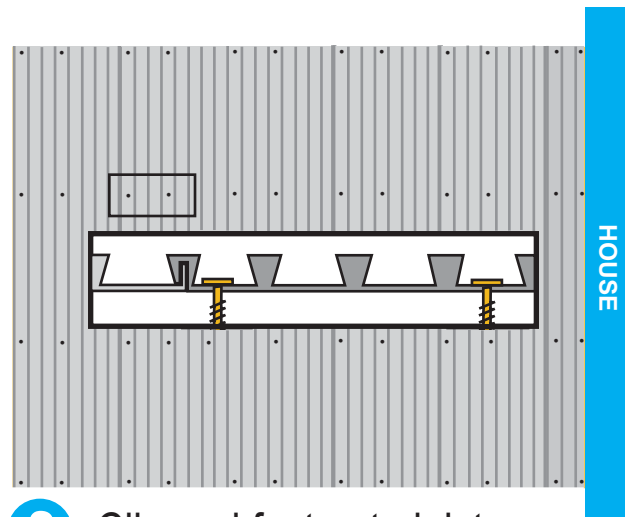


- 2** Clip and fasten to joists.

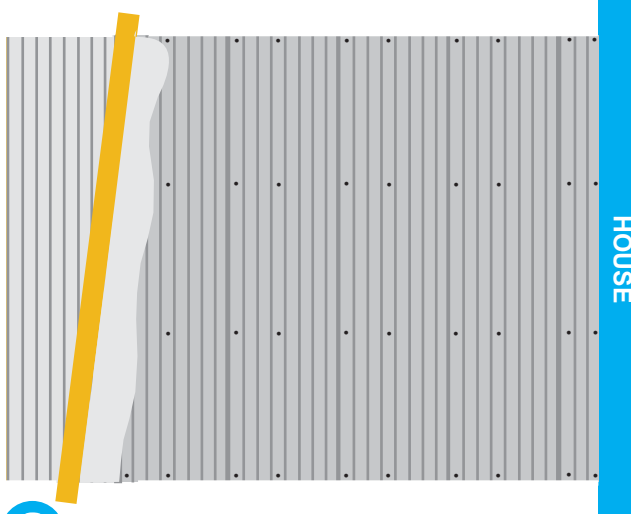


- 3** Spread mortar level with ribs. (Sand Topping mix by Quickrete)

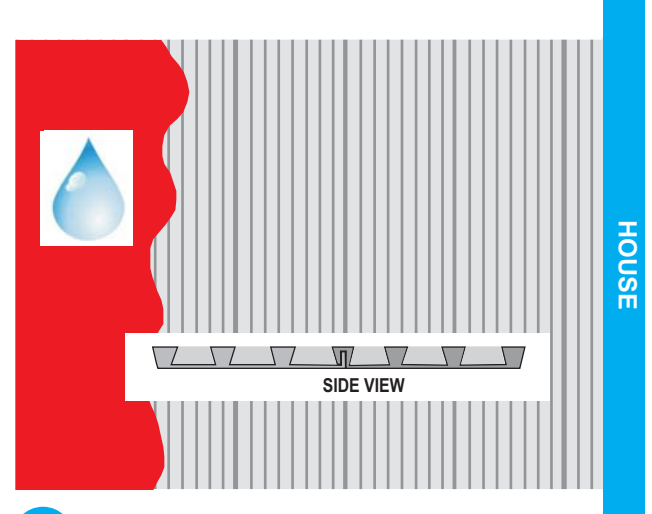

- 4** Clean surface. Apply waterproofing if necessary. (Red Guard by Custom Building Products)

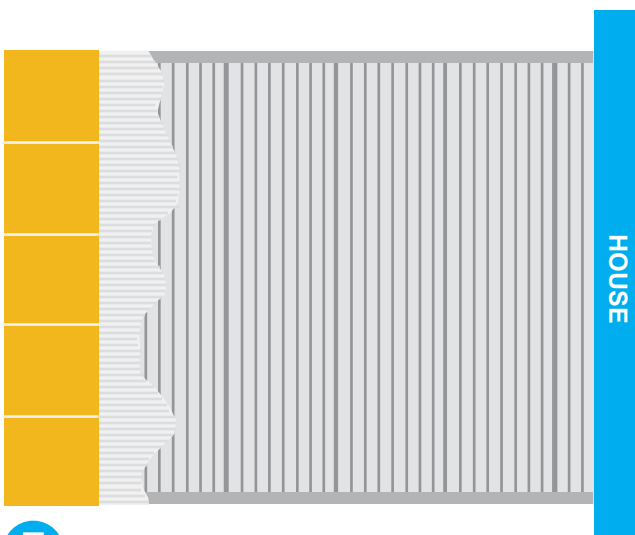

- 5** Trowel out thinset. Apply tile and edging. (Marble and Granite mix by Custom Building Products)

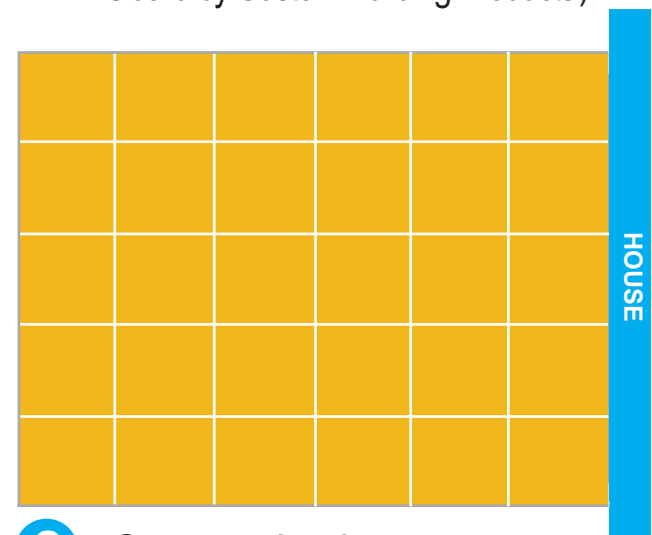

- 6** Grout and enjoy. (Polyblend sanded grout)

Detailed installation and application instructions can be found in supplemental material.